

Inverter Reconnection Steps

1. Download the HiSolar application from the App Store or Play Store



2. Open the application, select “**scan**” and scan the QR code on the inverter sticker (right-hand side of the inverter)
3. Once the device is scanned, select “**installer**” and enter the inverter password (this password would have been set by the installer during the commissioning process). Unless there is a generic password used, some common options are – 00000a , 0000000a , or Solar123
4. Once on the home page in HiSolar, tap “**SET**” on the menu
5. Under this page, tap “**Communication configuration**”
6. Select “**Router Connection Settings**”
7. Ensure that the WLAN field shows the desired Wi-Fi network to connect the inverter to
8. Enter the Wi-Fi password
9. Select “**Connect**” on the top right of the page
10. Once the top of the screen says “**Connection Successful**” you may disconnect from the inverter Wi-Fi access point and close the HiSolar application.